

# CENTURION

## REMOTE ORDERING OPTIONS

Art ID:  
**NOVA-4B**



**SPECIFICATIONS**  
Centurion  
Frequency - 433Mhz  
Buttons - 4  
Battery - LR23A

## COMPATIBLE WITH



NOVA-1



NOVA-2



NOVA-3



NOVA-4

## RECEIVER COMPATIBILITY

- Suits Models:  
D2 Turbo, D3 (BLUE button remote ONLY), D5 (BLUE button remote ONLY), D5 Evo, D10, D10 Turb, A10, R3, R5, Vantage 400, Vantage 500, Vector 2, Vector 40, Vector 500, Vert-X 300

# Remote Programming Steps

## Program Existing Remote to Receiver

1. Open the receiver unit, and WITH POWER ON, bridge the "Learn" jumper.
2. The red LED will now illuminate
3. Press the required button on the remote. The red LED will flash once, indicating that the button has been learned.
4. remove the bridge from the "Learn" jumper. The system is now ready for use.

## Program Existing Remote to Voyager Receiver

1. Press any button on the master remote for ten flashes of the red LED. If the receiver is not visible, count at least ten seconds. After ten seconds, release the button. The receiver is now in learn mode, and will remain so for ten seconds. The red LED will remain on during this time.
2. Any Nova button pressed during this time will be learned into memory. Each time a button is pressed, the learn time is extended for another ten seconds.
3. Ten seconds after the last button is pressed, the red LED will turn off, indicating that the receiver has exited learn mode.

## Deleting all remotes from the receiver

1. Link jumper J1 or J2 The red LED will flash 11 times. Removing the link during this time will cancel the erase operation.
2. After 11 flashes, the red LED will remain on. Removing the link now will completely erase the memory.

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.